

VaporTec 20/100/100Plus/200 納米霧化系統



VaporTec 20



VaporTec 100



VaporTec 100Plus



VaporTec 200

- 適用於牛仔、恤衫、T恤、針織衫的酵洗、漂洗、過軟油
- 採用PLC可編程控制器控制及人性化操作介面觸摸顯示屏操作，可根據需要設定不同的噴藥模式
- 獨特的噴咀將藥水以霧狀注入衣物，以最少量的藥水達到最佳的效果，取代“浸脫”傳統步驟，使噴藥能在節能、節水、節料的情況下完成
- 自動清洗功能，可有效解決不同藥水混合及噴咀堵塞問題
- 機身採用SUS304不鏽鋼材質，其中水箱採用SUS316不鏽鋼
- 可配合Wassar系列自動洗衣機使用，實現洗衣噴藥一體化操作，更加節能環保

- Suitable for spraying enzyme, bleaching water, and softener onto jeans, shirt, T-shirt and knitwear
- Adopt PLC and user friendly touch screen for operation; spray mode can be set if needed
- Unique jet nozzles spray chemical on garments in the form of mist to achieve the best effect with the least amount of chemical. Without conventional dipping and spinning steps involved, it can complete the spraying with the least consumption of energy, water and material
- Free of nozzle clogging issue because of automatic cleaning function
- Machine body is made of SUS304 stainless steel, and water tank of SUS316 stainless steel
- It can work jointly with Wassar series automatic washing machine to achieve integrated operation of washing and chemical spraying; energy saving and Eco-friendly

VaporTec 納米霧化系統可與 Wassar 系列自動洗衣機配合使用
 VaporTec system can be used in combination with Wassar series automatic washing machine



Wassar 50S VaporTec 20




Wassar 80 VaporTec 100




Wassar 550 VaporTec 100Plus



Wassar 550 VaporTec 200

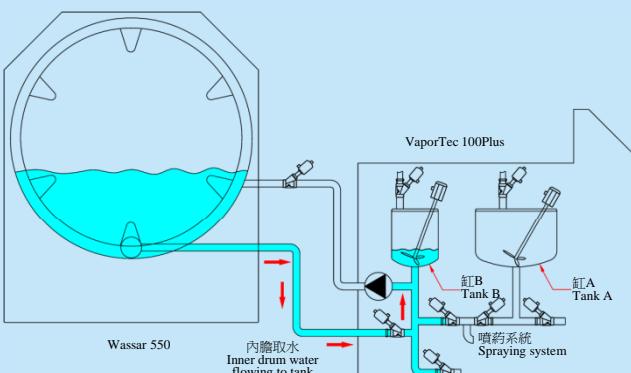

內膽取水示意圖
Diagram of inner drum water flowing to tank

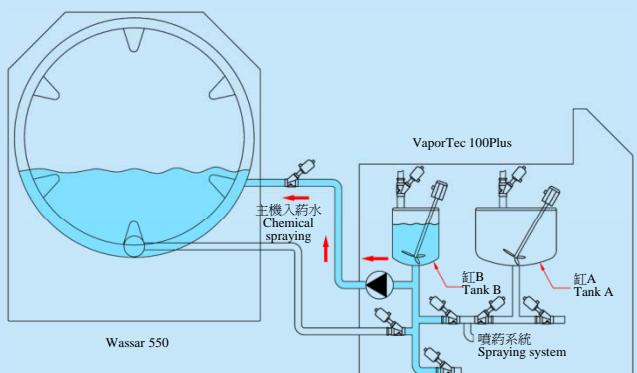

藥水噴入內膽示意圖
Diagram of chemical spraying to inner drum

型號 Model	電源 Power Supply	總功率 (kW) Total Power	水箱容量(L) Water Tank Volume	噴咀數量(pcs) Nozzle Number	單個噴咀流量(L/hr) Single Nozzle Flow	壓縮空氣壓力(kgf/cm ²) Compressed Air Pressure	耗壓縮空氣量(L/min) Compressed Air Consumption	機身尺寸(mm) Machine Size
VaporTec 20	1PH/220V/50Hz	0.2	20	3	43	5	25	560x810x1130
VaporTec 100			100	860x1130x1140				
VaporTec 100Plus		0.4	100 + 50	50			960x1630x1340	
VaporTec 200			100 + 100	960x1980x1340				



藝誠(余氏)發展有限公司
Ngai Shing Development Limited

香港九龍長沙灣永康街52號地下
G/F., 52 Wing Hong St.,

Cheung Sha Wan, Kln., Hong Kong.

Tel: (852) 2741 9981, 2742 0078 E-MAIL: info@ngaishing.com
Fax: (852) 2785 3149 Http://www.ngaishing.com

